


MONTAGEANLEITUNG **ASSEMBLY INSTRUCTION**

“Big Boy”

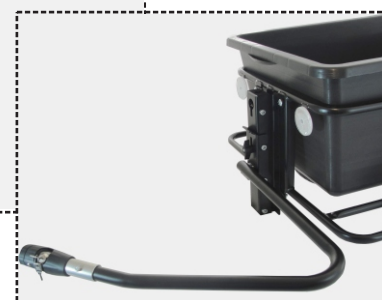

ART.-NR. 500 103
ART.-NR. 502 179




ROLAND WERK GmbH

Industriestraße 16
49681 Garrel
Tel.: 0 44 74 / 94 83-0
Fax: 0 44 74 / 94 83-33

www.roland-werk.de

MONTAGEANLEITUNG ASSEMBLY INSTRUCTION

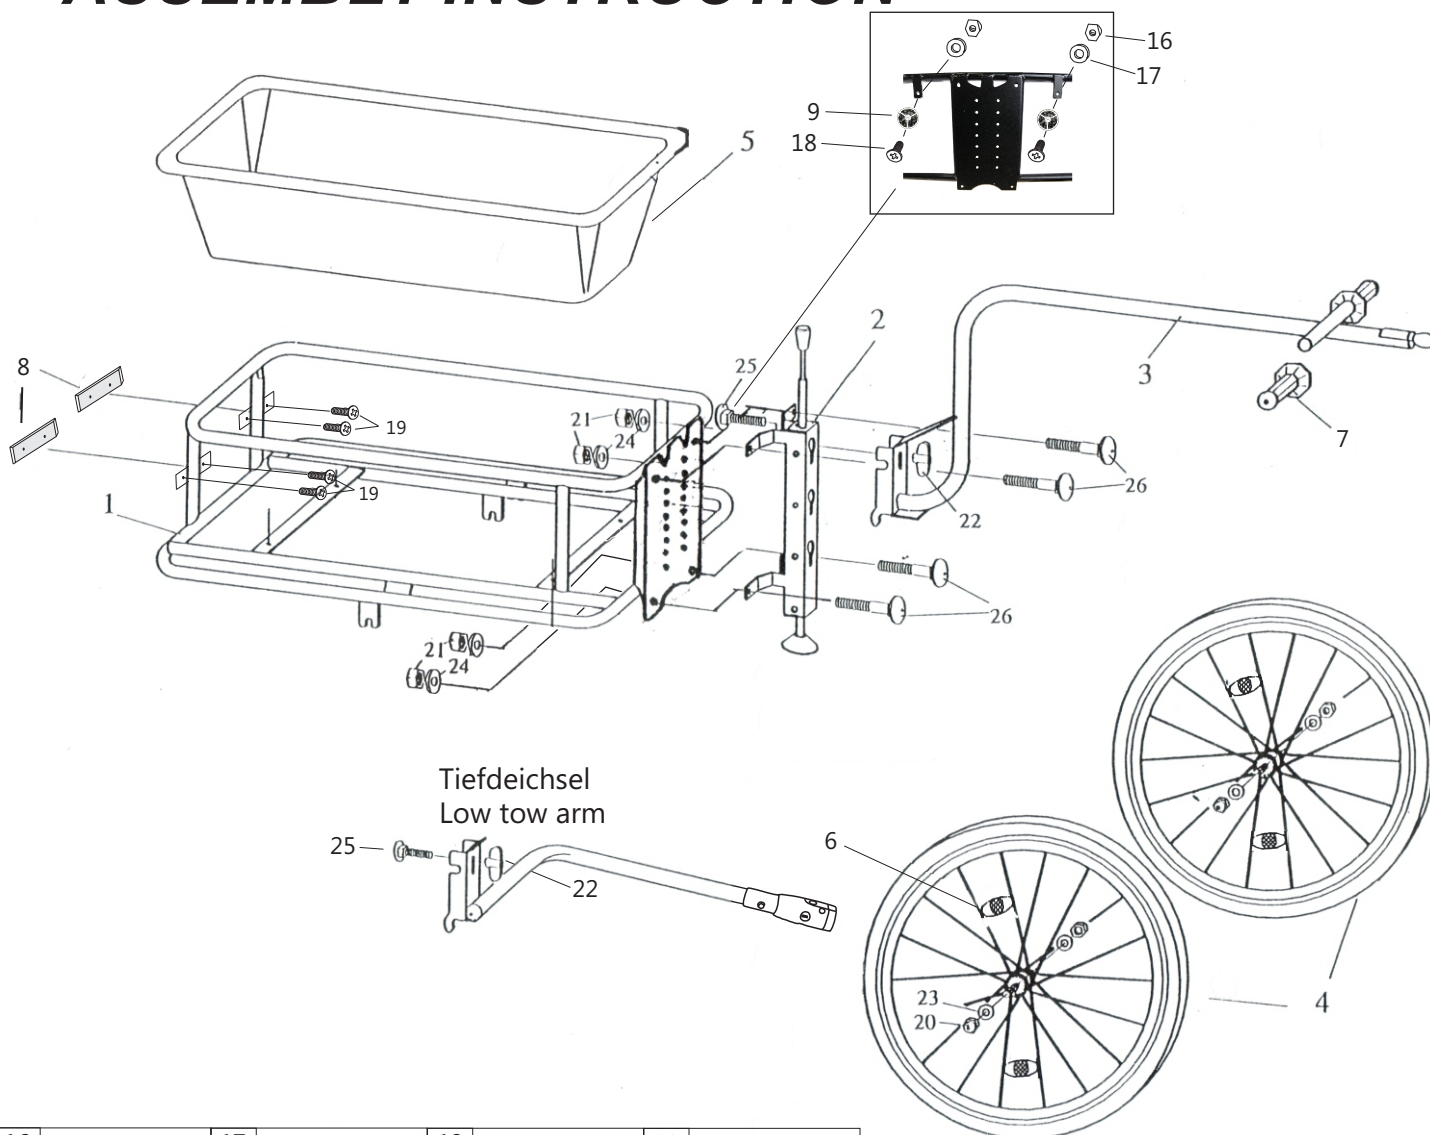

Tiefdeichsel
Low tow arm

16	2 x	17	2 x	18	2 x	19	4 x
Stopfmutter Stop nut	M5	Scheibe Washer	Ø 5.3	Senkkopfschraube countersunk bolt	5 x 14mm	Bleischraube tapping screw	3,5 x 9,5mm
20	4 x	21	4 x	22	1 x	23	8 x
Achsmutter Axle nut		Mutter Nut	M6	Flügelmutter Wing nut	M8	Kontaktscheibe contact washer	Ø 10.2
24	4 x	25	1 x	26	4 x		
Scheibe Washer	Ø 6.4	Schraube Screw	M8 x 25	Schraube Screw	M6 x 16		

Nr. No.	Beschreibung Description	Stck Pcs
1	Rahmen Frame	1
2	Schnelldeichseladapter Quick drawbar adapter	1
3	Deichsel Tow arm	1
4	Laufäder Wheels	2
5	Kunststoffwanne Plastic tub	1
6	Speichenreflektoren Spoke reflectors	4
7	Kunststoffgriffe Plastic handle bars	2
8	Z-Reflektoren rot Z-Reflector red	2
9	Reflektoren weiß Reflector white	2